 


User Manual
SD003

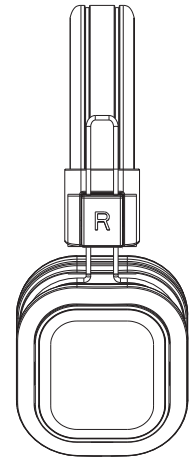 


Silent Disco Headphones with LED Light


Application scenarios :

- Boat Parties
- Rooftop Parties
- Kids Parties
- Mobile Parties
- Fitness Classes
- Yoga Classes
- Conferences
- Comedy Shows
- Fashion Shows
- Tours
- Music Festivals
- Concerts
- Outdoor Movies
- Public Events
- Quiet Theatre
- Galleries
- Camps
- Bachelorette Parties
- Wedding

Product Introduction

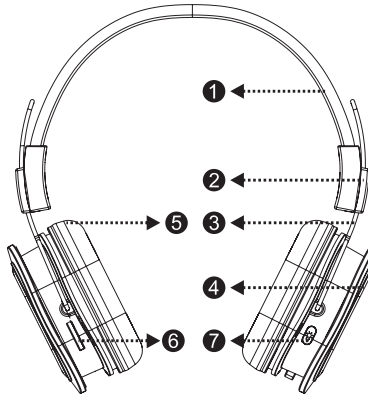

 - 1 Rubber Bow
- 2 Length Adjuster
- 3 Foldable Design
- 4 LED Lighting
- 5 Ultra comfortable ear pads
- 6 Volume Control
- 7 Channel Selector / Light Color Selectoe

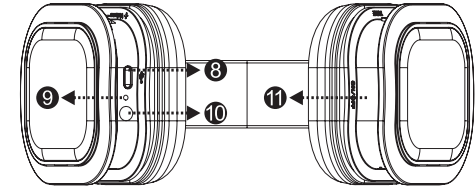

- 8 Type-c Charging Port
- 9 Power LED Indicator
- 10 Headphone Audio Output/Weird Audio Input
- 11 ON/OFF Switch

Use Instructions

POWER ON/OFF

When the headphone is powered off, push the power switch to "on" and the power indicator will be on blue. When charging the headphone, the power indicator light will be on red, and when the battery is fully

charged, the power indicator will be on green. When the battery is low, the power indicator blinks red. Push the power switch to "off" to turn off the headphone. The power indicator light will be out.

Channel setting

After power on the headphone, quickly double click to change channel, long-press the channel selector to turn on/off the light (LED light is always on as default)

Matching with signal transmitter

When use our transmitter, the headset is on the same channel as the transmitter, the headset can fastly receive the audio signal of the transmitter. If more than 1 transmitter are working at the same time, be sure different channels for each transmitter, the space between different transmitters should be at least 30CM.

Note : Each transmitter can be set up with 3 or more channels (TC_4 can have 3 channels at most), and the transmitter and the headset have 3 channels as factory default seting, A transmitter can be connected to numerous headsets and work at the same time.

Product performance failure table

Malfunction	Solution
NO SOUND	Carefully check the connection from the audio source to the audio input.
	Be sure the headset is turned on and the indicator is blue
	The volume of the headset may be too low, please turn up the volume.
	The volume of the audio source may be too low. Please turn up the volume.
	The audio source may not be in play mode.
DISTORTION	Check if the transmitter and the headset are on the same channel
	Check the audio cable of the transmitter to avoid poor contact.
	The battery of the headset may be too low.
	Check the environment for electromagnetic interference
	Different transmitters are on the same channel and they interfere, with each other.
	The distance between the headset and the transmitter is beyond effective range.

Technical Parameters

Battery Capicity : 650mAh
Input voltage : 5V=1A
Working temperature : -20℃-50℃
Charging temperature : 0℃-45℃
Type of interface : Type c USB Or DC port
Frequency response : 25Hz-20kHz
Carrier frequency : UHF800/900
Tuning mode : FM
Degree of distortion:<2%
Signal to noise ratio : >75dB
Receiving distance : UP TO 500M (Matched with our company's transmitter; please contact our sales staff for detail.)
Working time : >8 hours
Charging time : 2 hours
Time to power off before no signal received : 10 minutes

Packing List

Headphone x1
User manual x1(Optional)
Type_c charging cable x1(Optional)

CAUTIONS AND WARNINGS

Do not use in the following scenarios because the emitter, when communicating, may affect electronic or medical devices.

Near hospitals, people with pacemakers and other medical devices ;

Gas stations and other places with explosives (flammable gas, dust, metal powder and granular powder environment)

On aircraft (and near other easily tamped electronic devices)

Any other occasions where the use of radio equipment is restricted

Do not perform any of the following illegal operations on the product. Otherwise, equipment failure or even personal injury may occur:

Do not apply voltage beyond specified amount on the power supply or the charging interface of the product

Do not disassemble or modify this product

Do not put this product into water

Do not hit or throw the product

If the equipment emits smoke or peculiar smell during charging, please pull out the power plug immediately to prevent heat, combustion, fire or even explosion.

Additional Notes

Do not place the product in direct sunlight or near the heater.

Do not operate this product near TV/radio/signal tower (radio interference may occur)